

# TCL NXTPAPER 11 Plus

Full-color Electronic Paper Display

# 1 Table of Contents

 
<b>1</b>	<b>Your device .....</b>	<b>4</b>
1.1	Keys and connectors.....	4
1.2	Getting started .....	6
1.3	Home screen.....	7
<b>2</b>	<b>Text input .....</b>	<b>15</b>
2.1	Using the onscreen keyboard .....	15
2.2	Text editing.....	16
<b>3</b>	<b>Contacts .....</b>	<b>17</b>
3.1	Contacts.....	17
<b>4</b>	<b>Calendar, Clock, and Calculator .....</b>	<b>22</b>
4.1	Calendar.....	22
4.2	Clock.....	23
4.3	Calculator .....	25
<b>5</b>	<b>Multimedia applications .....</b>	<b>26</b>
5.1	Camera .....	26
5.2	Photos .....	27
<b>6</b>	<b>Support Center .....</b>	<b>30</b>
<b>7</b>	<b>Google applications .....</b>	<b>31</b>
7.1	Chrome.....	31
7.2	Gmail.....	31
7.3	Maps .....	32

 
7.4	YouTube.....	32
7.5	Play Store.....	32
<b>8</b>	<b>Settings.....</b>	<b>33</b>
8.1	My device .....	33
8.2	Wi-Fi.....	33
8.3	Bluetooth.....	35
8.4	Connection.....	36
8.5	NXTPAPER zone.....	41
8.6	Display.....	42
8.7	Sound & vibration.....	42
8.8	Notifications .....	43
8.9	Smart Manager.....	43
8.10	Storage .....	43
8.11	Apps.....	44
8.12	Advanced features.....	44
8.13	Security & privacy .....	44
8.14	Location .....	46
8.15	Safety & emergency.....	46
8.16	Accounts.....	46
8.17	Digital Wellbeing and parental controls....	47
8.18	Google.....	47
8.19	Accessibility .....	47
8.20	System.....	47

<b>9</b>	<b>Making the most of your tablet.....</b>	<b>50</b>
9.1	FOTA Upgrade.....	50
<b>10</b>	<b>Troubleshooting.....</b>	<b>51</b>
<b>11</b>	<b>Specifications .....</b>	<b>57</b>
<b>12</b>	<b>battery.....</b>	<b>59</b>

# 1 Your device.....

## 1.1 Keys and connectors

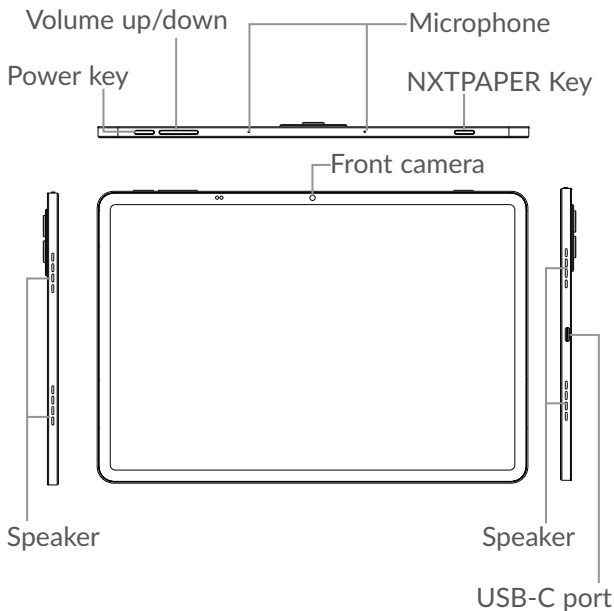

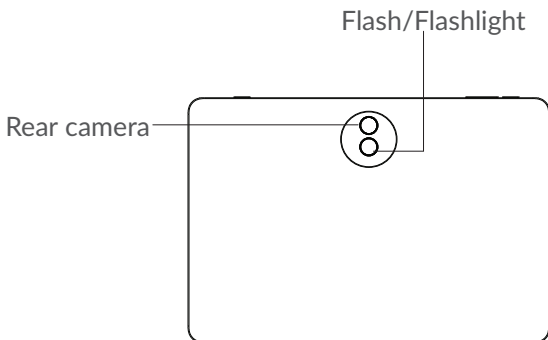

### Power/Lock key

- Press: Lock the screen/Light up the screen.
- Press and hold the **Power** key and **Volume Up** key to show the popup menu **Power off/Restart**.
- Press and hold the **Power** key and **Volume down** key to take a screenshot.
- Press and hold the **Power** key for at least 8 seconds to shut down.

 
### Volume keys

- Adjust the media volume while listening to music or a video, or streaming content.
- While using the **Camera** app, press **Volume up** or **down** key to take a photo or touch and hold to take several photos.

## 1.2 Getting started

### 1.2.1 Setting up

Your new tablet is partially charged. Charge the battery with the included C-C USB cable.

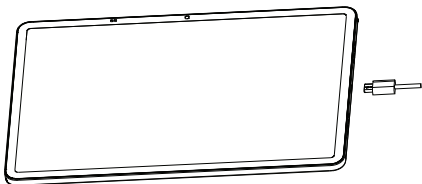

You are advised to fully charge the battery (🔋). Charging status is indicated by a percentage displayed on screen. The percentage increases as the tablet is charged.



To reduce power consumption and energy waste when the battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

### 1.2.2 Powering on your tablet

Hold down the **Power** key until the tablet powers on, unlock your tablet (Swipe, PIN, Password or Pattern) if necessary and confirm. The Home screen is displayed.

## 1.2.3 Powering off your tablet

Press and hold the **Power** key and **Volume Up** key until options appear, then select **Power off**.

## 1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access.

### Back

 
- Swipe from the left or right edge of the screen and an arrow pops out, then release to return to the previous screen.

### Home

- Swipe up from the thin line at the bottom of the screen to take you back to the main Home screen.

### Recent Apps

- Drag a finger up from the thin line and hold it for a while to get recent apps.

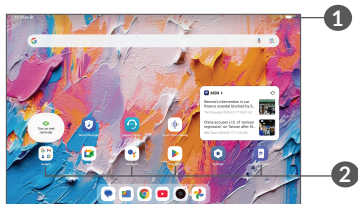

## 1 Status bar

- Status/Notification indicators
- Swipe down to open the Notification panel.

## 2 Favorite tray applications

- Tap the icon to open the application.
- Long press to move or remove applications.

## Auto-rotate screen

From the app list, tap **Settings** > **Display** > **Auto-rotate screen** to enable the function.

### 1.3.1 Using the touchscreen

Tap 

To access an application, tap it with your finger.

## Long press



To enter the available options for an item, long press the item. For example, select a contact in Contacts, long press this contact, an option list will appear.

## Drag



Long press an item and drag it to another location.

## Slide/Swipe



Slide the screen to scroll up and down the applications, images, and web pages. You can slide the screen horizontally too.

## Flick



Similar to swiping, flicking is a lighter and quicker stroke.

## Pinch/Spread



Place two fingers on the screen surface and draw them apart or together to scale an element on the screen.

The tablet also supports one finger zooming in Photos. Double tap the screen to zoom in/out.

## Rotate



Automatically change the screen orientation from portrait to landscape by turning the tablet sideways to have a better screen view.

### 1.3.2 Status bar

From the Status bar, you can view both tablet status (on the right side) and notification information (on the left side).

Swipe down the status bar to view notifications and swipe down again to enter the Quick settings panel. Swipe up to close it.

#### Notification panel

Swipe down the Status bar to open the Notification panel and Quick Settings panel as well.

 


Clear all notifications  
(ongoing notifications  
will remain)

## Quick Settings panel

From the Quick Settings panel you can enable or disable functions or change modes by tapping the icons

Tap to open **Settings**, to view the full list of settings.

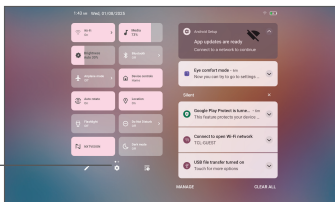

### 1.3.3 Locking and unlocking your screen

To protect your tablet and privacy, you can lock the tablet with a pattern, PIN, or password, etc.

#### To create a screen unlock pattern

- From the Home screen, tap **Settings** > **Security & privacy** > **Device unlock** > **Screen lock**.
- Set your own pattern.

 
#### To lock tablet screen

If your tablet remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power. Go to **Settings** > **Display** > **Sleep** and select a screen timeout period. You can also manually lock the screen by pressing the Power key once.

## To unlock the tablet screen

Press the **Power** key once to light up the screen, swipe up and unlock the screen with the method you have set.

If you have chosen **Swipe** as the screen lock, you can press the **Power** key to light up the screen, then swipe up to unlock the screen.

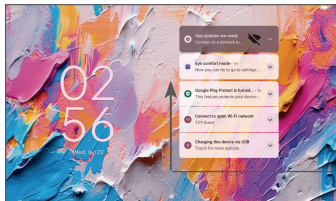

Swipe up to  
unlock the screen

## 1.3.4 Personalizing your Home screen

### Add

You can long press a folder, an application or a widget and drag the item to your preferred Home screen.

### Reposition

Long press an item and drag it to the desired position and then release. You can move items both on the Home screen and the Favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

## Remove

Long press an item and drag it up to the top of the **Remove** icon, then release.

## Create folders

To improve the organization of shortcuts or applications on the Home screen and the Favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and tap the folder's title bar to input the new name.

## Wallpaper customization

Long press an empty area on the Home screen, then tap **Wallpaper & style** to customize wallpaper.

## 1.3.5 Widgets and recently used applications

 
### Consult widgets

Long press the empty area on the Home screen, then tap **Widgets** to display all widgets.

Tap the selected widget and slide it to move to your preferred screen.

### Consult recently used applications

Drag a finger up from the thin line and hold it for a while to get recent apps. Tap a thumbnail in the window to open the application.

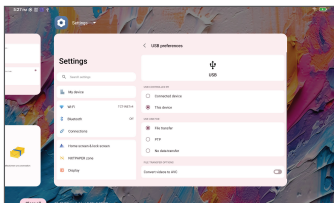

Tap one thumbnail and slide it up to close an application.

Tap **Clear all** at the bottom of screen to close all the running applications.

## 1.3.6 Volume adjustment

### Using the volume key

Press the **Volume** key to adjust the volume. To activate the silent mode, press the **Volume down** key until the tablet is silent.

### Using the settings menu

From the Home screen, tap **Settings > Sound & vibration** to set the volume for media, notifications, alarms, etc.

# 2 Text input.....

## 2.1 Using the onscreen keyboard

 
### Onscreen keyboard settings

Go to **Settings > System > Keyboard**, tap the keyboard you want to set up and a series of settings will become available.

### Adjust the onscreen keyboard orientation

Turn the tablet sideways or upright to adjust the onscreen keyboard orientation. You can adjust it by changing the settings (go to **Settings > Display > Auto-rotate screen**).

### 2.1.1 Gboard

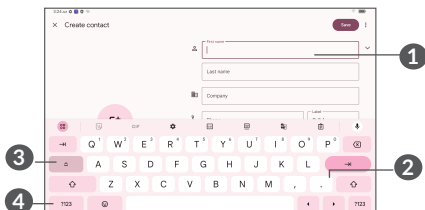

- 1 Enter text or numbers.
- 2 Long press to select symbols.

- ③ Press to switch between "abc/ABC" mode;
- ④ Switch between symbol and numeric keyboard.

## 2.2 Text editing

You can edit the texts which you have entered.

- Long press or double tap within the texts you want to edit.
- Drag the tabs to change the selected texts.
- The following options will appear: **Cut**, **Copy**, **Share** and **Select all**.
- If you have previously cut or copied any text, tap the tab to show **Paste** which allows you then paste the text at the current location.

# 3 Contacts .....

 
## 3.1 Contacts.....

**Contacts** enables quick and easy access to the contact you want to reach.

You can view and create contacts on your tablet and synchronize them with your Gmail contacts or other applications.

### 3.1.1 Consult your Contacts

To see your contacts, tap  from the App drawer.

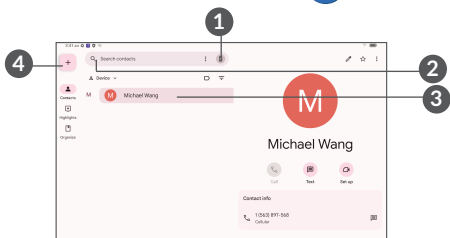

- 1 Display the contacts list option menu
- 2 Tap to search contacts
- 3 Long press to select contact(s) to delete
- 4 Add new contact



Deleted contacts will also be removed from other applications on the tablet or web the next time you synchronize your tablet.

### 3.1.2 Adding a contact

Tap **+** in the contact list to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another.

The screenshot shows the 'Create contact' screen with the following elements and callouts:

- 1**: Points to the 'Save' button at the top right.
- 2**: Points to the 'First name' and 'Last name' input fields.
- 3**: Points to the 'Add picture' icon on the left side.

The form includes fields for: First name, Last name, Company, Phone, Email, Significant date, and labels for Cellular, Home, and Birthday. A 'More fields' link is at the bottom.

- 1 When finished, tap this icon to save
- 2 Tap to open available labels
- 3 Select a picture or take a photo for the contact


#### Add to/Remove from Favorites <sup>(1)</sup>

To add a contact to favorites, you can tap a contact to view details then tap ☆ to add the contact to favorites.

- (1) Only tablet contacts and account contacts can be added to Favorites.

To remove a contact from favorites, tap ★ on the contact details screen.

### 3.1.3 Editing your contacts

To edit contact information, tap  in the contact details screen.

When finished, tap **Save** to save.

### 3.1.4 Importing, exporting and sharing contacts

This tablet enables you to import contacts from your internal storage to your tablet and export your tablet contacts via a .vcf file for sharing with others.


#### To import contacts:

From the Contacts screen, tap **Organize > Import from file**, then select contacts file to import.

#### To export and share contacts:

From the Contacts screen, tap **Organize > Export to file**, and enter a name for vcf file for future use, then tap **Save**, the contacts will be automatically exported.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail.

Tap and hold a contact you want to share, Tap  Share on contact details screen, and then select the application to perform this action.

### 3.1.5 Displaying contacts

Tap **Organize** and then **Settings**, select **Sort by** > **First name** or **Last name** to sort the contacts list. You can also view contact names by **First name first** or **Last name first** through the **Name format** menu.

### 3.1.6 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your tablet.

To add an account, tap **Organize** from the contacts list and tap **Settings** > **Accounts**, or from the app list, then **Settings** > **Accounts** > **Add account**.

You are required to select the kind of account you are adding, like Exchange and Google.

As with other account setups, you need to enter detailed information, like username, password, etc.

You can remove an account and all associated information from the tablet. Tap the account you want to delete > Select **REMOVE ACCOUNT**.

## Auto-sync

On the **Accounts** screen, tap **Automatically sync data**, when activated, all changes to information on the tablet or online will be automatically synchronized with each other.

# 4 Calendar, Clock, and Calculator .....

## 4.1 Calendar

You can use **Calendar** to keep track of important meetings, appointments, etc.


To view the calendar and create events, open Google apps folder from Home screen, then tap **Calendar**.


### 4.1.1 Multimode view

You can display the Calendar by **Schedule**, **Day**, **Week**, or **Month**.



### 4.1.2 To create new events

You can add new events from any Calendar view.


- tap .
- Fill in all required information for this new event. If it is a whole-day event, you can select **All-day**.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. The guests will receive an invitation from Calendar and Email.
- When finished, tap **Save** from the top of the screen.

To quickly create an event from the Week view screens, tap an empty spot to select a target area which will then turn , then tap the icon to create the new event.

### 4.1.3 To delete or edit an event

To delete or edit an event, tap the event to enter its details screen. Tap  to edit the event, or tap  and then **Delete** to delete.

### 4.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon  will appear on the Status bar as a notification when the reminder time arrives.

Swipe down the Status bar to open the Notification panel and tap an event name to view the Calendar notification list.


Tap the **Back** button to keep the reminders pending in the Status bar and the Notification panel.

## 4.2 Clock

Your tablet has a built-in clock. swipe up the Home screen, then tap **Clock**.


### 4.2.1 Clock


To view the world clock, tap Clock on the Time screen.

Tap  to add a time zone.


## 4.2.2 Alarm

From the Clock screen, tap **Alarm** to enter the **Alarm** screen.

Turn on  to enable the alarm.


Tap  to add a new alarm:

 
Tap a currently existing alarm to enter the alarm editing screen.

Tap  to delete the selected alarm.

## 4.2.3 Timer

From the Clock screen, tap **Timer** to enter the **Timer** screen.



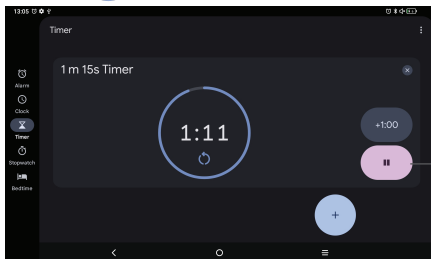


- Select the time.
- Tap  to start the countdown.




Pause/play

## 4.2.4 Stopwatch

From the Clock screen, tap **Stopwatch** to enter the **Stopwatch** screen.

 
- Tap  to start the Stopwatch.
- Tap  to show a list of records according to the updated time.
- Tap  to halt the total and lap times. These will only restart after  is tapped.
- Tap  to delete the record.

## 4.2.5 Adjust Clock settings

Tap  and then **Settings** to access **Clock**, **Alarms**, **Timer** and **Screensaver** settings.

## 4.3 Calculator


To solve mathematical problems with Calculator, swipe up from the home screen, then tap Calculator.

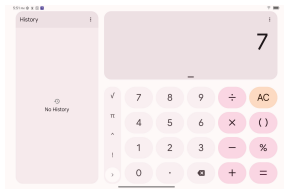


Tap  to delete all at once.

# 5 Multimedia applications.....


 
## 5.1 Camera

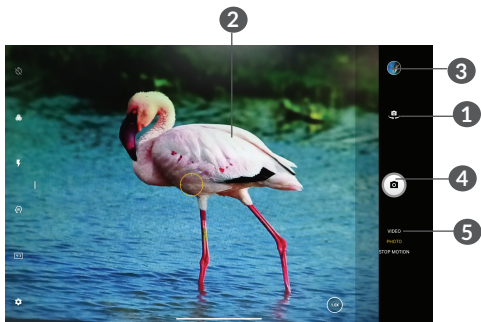To take a photo or video, tap  from the Home screen.








- 1 Switch between front and rear camera
- 2 Spread fingers apart to zoom in, or pinch fingers together to zoom out
- 3 View the photos or videos you have taken
- 4 Take a photo
- 5 Change to video mode

## To take a photo

tap  to capture. The photo will be automatically saved. You can also long press  to take burst shots.

## To take a video

tap **VIDEO** to change the camera mode to video, then tap  to start video recording. You can also tap the left icon  to take a picture during video recording.


Tap  to pause video recording and tap  to continue. Tap  to stop recording. The video will be automatically saved.

## 5.2 Photos

Photos act as a media player for you to view photos and play videos. In addition, a set of further operations to pictures and videos are available for your choice.

To view the photos you have taken, slide up from the Home screen, then tap **Photos**.

Pictures and videos are displayed by albums.

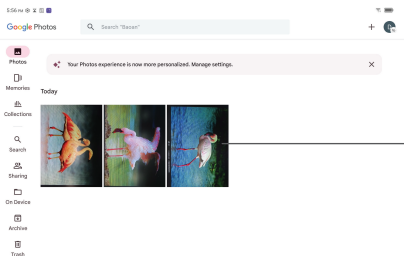 


Select photos for further operation.


## Working with pictures

Find the picture you want to work on and tap the picture to enter the full-screen picture view.

Tap  to share the picture.

Tap  to delete this picture.



Tap  to use Google lens to analyze the photo and deliver search results.

Tap  select **Use as** to set the picture as Contact photo or Wallpaper.

Tap  to edit the picture or video.

## Batch operation

The Photos provide a multi-select function, so that you can work with pictures/videos in batches.

On **Photos** screen, long press a picture or video to activate batch operation mode, then tap videos/pictures you want to work with. Tap  to delete selected files. Tap  to share selected files.

## 6 Support Center

**Support Center** helps you to learn more about Hot FAQs, operation instructions, troubleshooting, etc. You can also feedback your comments to us through it.

# 7 Google applications .....

Google apps are preinstalled on your tablet to improve work efficiency and help you enjoy life.

This manual briefly introduces the apps. For detailed features and user guides, refer to related websites or the introduction provided in the apps.

You are recommended to register with a Google account to enjoy full functionality.

## 7.1 Chrome

A web browser with which you can surf the internet.

Your bookmarks, browsing history, and settings across all devices on which the browser is installed can be synchronized with your Google account.

## 7.2 Gmail

As Google's web-based email service, Gmail is configured when you first set up your tablet. With this application, you can send and receive emails, manage emails by labels, archive emails, etc. Emails can be automatically synchronized with your Gmail account.

## 7.3 Maps

Google Maps offers satellite imagery, street maps, 360° panoramic views of streets, real-time traffic conditions, and route planning for traveling by foot, car, or public transportation. By using this application, you can get your own location, search for a place, and get suggested route planning for your trips.

## 7.4 YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content such as video blogging, short original videos, and educational videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the internet.


## 7.5 Play Store

Serves as the official app store for the Android operating system, allowing users to browse and download applications and games. Applications are either free of charge or at a cost.

In Play Store, search for the app you need, download it and then follow the installation guide to install the app. You can also uninstall, update an app, and manage your downloads.

# 8 Settings.....

To go to Settings, swipe up from the Home screen and tap **Settings**.

You can also swipe down from the notification panel and tap .

## 8.1 My device


View basic information for your tablet such as model name, CPU, camera, Storage, etc.

You can also check legal information, build number, status and other specs.

## 8.2 Wi-Fi

You can connect to the internet when your tablet is within range of a wireless network.

**To turn Wi-Fi on and connect to a wireless network**

- Tap **Settings > Wi-Fi**.
- Turn on .
- Once Wi-Fi is turned on, detected Wi-Fi networks are listed.

- Tap a Wi-Fi network to connect to it. If the network you selected is secured, you are required to enter a password or other credentials (you should contact the network operator for details). When finished, tap **CONNECT**.

## To add a Wi-Fi network

When Wi-Fi is on, you can add new Wi-Fi networks according to your preference.

- Tap **Settings > Wi-Fi**.
- Tap **Add network**.
- Enter the name of the network and any required network information.
- Tap **CONNECT**.

## To forget a Wi-Fi network

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- On the Wi-Fi screen, tap the name of the saved network.
- Tap **FORGET** in the dialog that opens.

## 8.3 Bluetooth

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

### To turn on Bluetooth

- Tap **Settings > Bluetooth**.
- Turn on **Bluetooth** .

Your device name and other available devices will appear on screen.

### To rename your device

- Tap **Settings > Bluetooth**.
- Tap **Device name**.
- Enter a name, and tap **RENAME** to confirm.


### To pair/connect your tablet with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your tablet with the Bluetooth device with which you want to exchange data.

- Tap **Settings > Bluetooth**.
- Tap **+ Pair new device**.
- Tap a Bluetooth device you want to pair your tablet with in the list.
- In the dialog that pops up, tap **PAIR** to confirm.


- If the pairing is successful, your tablet will be connected to the device.

## To unpair from a Bluetooth device

- Tap  beside the device you want to unpair from.
- Tap **FORGET** to confirm.

## 8.4 Connection

### 8.4.1 Airplane mode

Turn on **Airplane mode**  to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

### 8.4.2 Tethering

To share your tablet's data connection via USB and Bluetooth, go to **Settings > Connection > Tethering** to activate these functions.


### 8.4.3 Data usage

Tap **Settings > Connection > Data usage** to check the daily total data usage and the data usage of each App.

## 8.4.4 VPN

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

### To add a VPN

- Tap **Settings** > **Connection** > **VPN** and then tap .
- On the screen that opens, follow your network administrator's instructions to configure each component of the VPN settings.
- Tap **SAVE**.

The VPN is added to the list on the VPN settings screen.



Before adding a VPN, you should set a screen lock for your tablet.

### To connect/disconnect to/from VPN

To connect to a VPN:

- Tap **Settings** > **Connection** > **VPN**.
- The VPNs you have added are listed. Tap the VPN you want to connect with.


- In the dialog that opens, enter any requested credentials and tap **CONNECT**.

To disconnect from a VPN:


- Tap the VPN you want to disconnect from. In the dialog that opens, tap **DISCONNECT**.

## To edit/delete a VPN

To edit a VPN:

- Tap **Settings > Connection > VPN**.
- The VPNs you have added are listed. Tap the  icon next to the VPN you want to edit.
- After editing, tap **SAVE**.

To delete a VPN:

- Tap the  icon next to the selected VPN, then tap **FORGET** to delete it.

## 8.4.5 Private DNS

Tap to select private DNS mode.

## 8.4.6 Cast

This function can transmit your tablet content to TV or other device capable of supporting video over Wi-Fi connection.

- Tap **Settings > Connection > Cast**.
- Tap the device name you want to connect.

**Note:** Connect your device to a Wi-Fi network before using Cast.

### 8.4.7 USB

With the USB cable, you can transfer media files and other files between your internal storage and a computer. Go to **Settings > Connection > USB**, select **Transfer files** or **Transfer photos (PTP)**.

### 8.4.8 Printing

Tap Printing to activate Print services. You can select your Default print service or choose Add service.

### 8.4.9 Quick Share

Quick Share is a service to send and receive files between Android devices located at proximity. A list of devices will appear in your proximity when using the Quick Share feature, which you can share content with. When you tap on the receiver, they will be notified with the option to accept or decline the file you are sharing. Google's Quick Share will then automatically choose the best protocol for fast and easy sharing using Bluetooth, Bluetooth Low Energy, WebRTC or peer-to-peer Wi-Fi. This means you can use Quick Share even when you are completely offline.

## 8.4.10 Second Screen

Use your tablet as a second screen to your compatible Windows laptop.

### How to screen share

1. Connect your PC and tablet to the same Wi-Fi network.
2. On tablet Home screen, swipe down from Status bar to reveal Quick settings, then select Extend mode.
3. On the PC, go to the desktop and simultaneously press "Windows" key + "K" key on the keyboard. This action will launch "connection" list displayed in right side of PC screen
4. Select tablet name "9469X\_CA"
5. On PC keyboard, press "Windows" key + "P" key to activate Extended Display Mode.

## 8.4.11 Home screen & lock screen

**Home settings:** Set your preferred Home screen style. Enable or disable **Fill empty cells**, that is, when apps are removed the empty cells will be filled automatically. Enable **Google feed**, you will enjoy the news feed service when swiping right from Home screen. Enable **App icon badge**, you can choose shown with number or show without number when there are notifications.

**Lock screen settings:** Set to show all notifications or don't shown any notification. Set the message displayed as the screen is locked. Enable **Wake screen for notifications**, the screen will light up for new notifications.

**Non-lock screen charging animation:** When enabled, the screen will display the charging percentage animation when charging.

**Default home app:** Customize your home app.

## 8.5 NXTPAPER zone

NXTPAPER offers superior image quality with reduced glare and reflections. Tap **NXTPAPER zone** to change NXTPAPER mode, you can select your preferred mode.

- **Regular Mode:** High definition bright original colours display effect.
- **Colour Paper Mode:** Low saturation and soft colour display effect, bringing a paper-like experience to improve all-round eye comfort.
- **Ink Paper Mode:** Paper-like display effect with black and white ink, which brings an immersive e-ink like reading experience.

## 8.6 Display

In this menu, you can adjust your screen brightness, select screen display mode such as dark mode, eye comfort mode, set sleep time, font size, etc.

To rotate screen contents when device is rotated, tap **Auto-rotate screen**.

**Status bar**, tap **Display > Status bar > Battery percentage**, and you can set how the battery percentage is displayed inside or next to battery icon, or not to show at all.

Tap **Notifications icons folder**, then all notifications you received will be hidden in a separate icon.

## 8.7 Sound & vibration

- **Volume**: adjust the volume, or you can enable the silent mode.
- **Ringtone**: set ringtones for tablet, notification and alarm.
- **Do not disturb**: when enabled, incoming calls and notifications will be silenced (except for alarms), and the tablet will not wake up when the screen is off.
- **Live Caption**: Live Caption detects speech on your device and automatically generate captions.

- More sound settings: Enable/Disable sound for Screen lock, Tap and NXTPAPER mode switch.

## 8.8 Notifications

- App icon badges: Choose how to show the icon badges (with number or with a red spot)when apps receive new notifications.
- Privacy: Choose to shown all notifications or don't show any notifications.
- Notification icons folder: When enabled, all notification icons will be hidden in a separate icon.
- Manage app notifications: Configure whether to block the notifications from this app.

## 8.9 Smart Manager

Smart Manager ensures your tablet is operating in top form by automatically scanning and optimizing data usage to preserve battery levels, manage storage and protect against security threats. You can also do some manual settings for further optimization.

## 8.10 Storage

Use these settings to monitor the total and available space on your tablet and microSD card.

## 8.11 Apps

Tap to view details about the applications installed on your tablet, to manage their data usage or force them to stop.

## 8.12 Advanced features

- Screen Recorder allows you to record screen content. Set the video resolution, with or without sound, and whether to record screen interactions. Swipe down from the status bar to access Quick Settings panel then go to Screen recorder.
- T-Pen: Enable compatible stylus, like TCL T-PEN. Access different features, such as key functions.

## 8.13 Security & privacy

### Security status

- **Google play protect:** Play Protect regularly checks your apps and devices for harmful behavior. You will be notified of any security risks found. Go to **App security > Google play protect** and select scan to check.

- **Security update:** Go to **System & updates > Check for updates** to check if any security updates are pending for your device.
- **Find My Device:** Go to **Device finders > Find My Device** to enable **Use Find My Device**, this feature will help you locate your device remotely, if you lose your device, it also can help you keep your data safe.
- **Account security:** Take a quick Security Checkup, an easy way to review and manage your Google Account's security settings.

## Device unlock

- **Screen lock:** Choose screen lock such as None, Swipe, Pattern (draw an unlock pattern), Pin (set a PIN), Password (set a password).
- **Face unlock:** This is a backup screen lock method, you can choose Face unlock+Pattern, Face unlock+PIN and Face unlock+Password.

## Privacy

To protect your privacy, you can set an app to be allowed or forbidden to access your location, call logs, contacts, etc. Also whether or not to show passwords or choose the activities and info that you want to Google to save.

## Others

You can also set Device admin apps, Encryption & credentials, App content, Trust Agents and more in **Settings > Security & privacy > More security & privacy**.

### 8.14 Location

Tap to set whether to allow an app to access your device's location. You can set allowing continual access, or only while the app is in use.

### 8.15 Safety & emergency

**Emergency Location Service:** When enabled, your device can automatically send its location to emergency response partner when you call or text an emergency number.

**Earthquake alerts:** When enabled, when an earthquake is detected nearby, you will get an alert with the initial estimated magnitude and distance from your location.

### 8.16 Accounts

Tap **Add account** to add an account for owner.

## **8.17 Digital Wellbeing and parental controls**

In this menu you can find how much time you have spent on the tablet and even on each app. You can customize the time limit for using the tablet so that have a healthy and balanced life. In addition, parents are able to restrict their children's usage time to manage their browsing habits.

## **8.18 Google**

Tap to configure your Google account and services settings.

## **8.19 Accessibility**

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your tablet.

## **8.20 System**

### **8.20.1 System Update**

Check for sytem updates

### **8.20.2 Update apps**

Check for apps update and keep your apps up to date.

## **8.20.3 Navigation mode**

Change the navigation mode to Button navigation or Gesture navigation.

## **8.20.4 Languages**

Configure language settings.

## **8.20.5 Keyboard**

Configure On-screen keyboard, Spell checker, pointer speed, etc

## **8.20.6 Date & time**

Use Date & time settings to customize your preferences for how date and time are displayed.

## **8.20.7 Backup**

Back up your tablet's settings and other application data to Google servers. If you replace your tablet, the settings and data you've backed up will be restored onto the new device when you sign in with your Google account.

## **8.20.8 Multiple users**

Share your tablet by adding new users. Each user has a personal space on your tablet for custom Home screens, apps and more.

## **8.20.9 Reset option**

Tap to reset Wi-Fi, Bluetooth, Reset app preferences, or Erase all data.

## **8.20.10 Regulatory & safety**

Tap to view product information.

# 9 Making the most of your tablet .....

## 9.1 FOTA Upgrade

Use the FOTA (Firmware Over The Air) Upgrade tool to update your tablet's software. To access **Updates**, from the app list, tap **Settings > System > System Update**.

If you want to update the system, tap **CHECK FOR UPDATES** and when that's finished, your tablet will have the latest version of the software.

During FOTA downloading or updating, to avoid errors in locating the correct update packages, do not change your default storage location.

# 10 Troubleshooting.....

Before contacting the service center, here are some instructions to help you troubleshoot your device:

- For optimal operation, fully charge the battery.
- To improve the tablet's performance, remove unnecessary files or apps on your tablet.
- Update your tablet's software, go to **Settings > System > System Update**.
- Reset your tablet via **Erase all data (factory reset)**. Tap **Settings > System > Reset** options. Another method is to hold down the **Power** key and the **Volume up** key at the same time when your tablet is powered off, and then select. All your tablet data will be lost permanently. It is strongly advised to fully back up your tablet data before resetting.

and carry out the following checks:

## **My tablet can't be switched on or is frozen**

- When the tablet can't be switched on, charge for at least 20 minutes to ensure the minimum battery power needed. Then switch it on again.

- When the tablet falls into a loop during power on animation and the user interface can't be accessed, press and hold the **Power** key to reset. This eliminates any abnormal OS booting issues caused by third party applications.
- If neither method is effective, reset the tablet by pressing the Power key and the Volume up key at the same time, selecting a language, and then selecting **Wipe data/Factory reset**. Press the **Volume** key to select, and press the **Power** key to confirm each selection.

### **My tablet has not responded for several minutes**

- If your tablet doesn't respond, turn off your tablet by pressing and holding the **Power** key until it turns off and then restart it again.
- If your tablet has a removable battery, remove the battery and reinsert it, then restart the tablet.
- If it still doesn't work, reset the tablet.

### **My tablet turns off by itself**

- Check that your screen is locked when you are not using your tablet, and make sure that the **Power** key is not accidentally pressed while the screen is unlocked.
- Check the battery charge level.
- If it still doesn't work, reset the tablet or update software.

## **My tablet can't charge properly**

- Make sure that you are using the **TCL** charger that comes with the tablet.
- If your tablet has a removable battery, make sure that your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power has been empty for a long time, it may take around 20 minutes to display the battery charging indicator on the screen.
- Make sure that charging is carried out under normal conditions (0°C (32°F) to 40°C (104°F)).
- When abroad, check that the voltage input is compatible.

## **My tablet can't connect to a network or "No service" is displayed**

- Try connecting to the network by moving to another physical location.
- Verify the network coverage with your operator.
- Try connecting at a later time if the network is overloaded.

## **My tablet can't connect to the internet**

- Check your tablet's internet connection settings.

- Make sure that you are in a place with network coverage.
- Try connecting at a later time or another location.

### **I can't use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service.
- Make sure that this feature doesn't require an **TCL** accessory.

### **I can't connect my tablet to my computer**

- Check to make sure the USB port is not broken. If it's not working, try another USB port on your computer.
- Make sure USB drivers are properly installed.
- If you are using a Windows computer, make sure it supports MTP mode. If you are using a Mac, make sure to install Android File Transfer from [www.android.com/filetransfer/](http://www.android.com/filetransfer/).

### **I can't download new files**

- Make sure that there is sufficient tablet storage space for your download.
- Select the microSD card as the location to store downloaded files.
- Check your subscription status with your operator.

### **The tablet can't be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your tablet is visible to other users.

- Make sure that the two tablets are within Bluetooth's detection range.

### **The battery drains too fast**

- Make sure that you follow the complete charge time (minimum 240 minutes).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Adjust the brightness of screen as appropriate.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for extended periods of time.
- Turn off Bluetooth, Wi-Fi, or GPS when not in use.

### **The tablet becomes warm following game playing, internet surfing or running other complex applications**

- This heating is a normal consequence of the CPU handling excessive data. Ending the above actions will make your tablet return to normal temperature.

## **After a factory data reset is performed, I can't use my tablet without entering Google account credentials**

- After a reset is performed, you must enter the original Google account credentials that were used on this tablet.
- If you don't remember your Google account credentials, complete Google account recovery procedures.
- If you still cannot access your tablet, apply to the authorized repair center, but remember that it will not be regarded as warranty case.

## **I forget some passwords/codes/keys on tablet**

- Perform a factory data reset.
- If you still cannot access your tablet, apply to the authorized repair center, but remember that it will not be regarded as a warranty case.

# 11 Specifications.....

## **Processor :**

Media Tek Helio P60T

## **Platform :**

Android 13

## **Memory :**

9466X6:256GB ROM + 6GB RAM

## **Dimensions (LxWxT) :**

257.04\*161.64\*6.95

## **Weight :**

462g

## **Display :**

2000 \*1200

## **GPS :**

GPS

## **Connectivity :**

- Bluetooth BT5.0
- Wi-Fi 802.11a/b/g/n/ac
- USB Type C

## **Camera :**

- 8 megapixel front camera
- 8 megapixel rear camera

## **Audio supported formats :**

AAC LC, HE-AACv1 (AAC+), HE-AACv2 (enhanced AAC+), AAC ELD (enhanced low delay AAC), AMR-NB, AMR-WB, FLAC, MP3, MIDI, Vorbis, PCM/WAVE

## **Battery <sup>(1)</sup> :**

Capacity: 8000mAh

## **Expansion Slot :**

microSD™ memory card  
(Availability of microSD card depends on market)

**Note:** Specifications are subject to change without prior notice.

## **Disclaimer**

There may be certain differences between the user manual description and the tablet's operation, depending on the software release of your tablet or specific carrier services.

TCL Communication Ltd. shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the carrier exclusively.

<sup>(1)</sup> The original battery has undergone rigorous safety inspections to meet qualification standards, the use of non-original batteries may be dangerous.

# 12 battery

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCL Communication Ltd. and/or its affiliates.

Observe the following precautions:

- Do not attempt to open the back cover;
- Do not attempt to eject, replace, or open battery;
- Do not puncture the back cover of your device;
- Do not burn or dispose of your device in household rubbish or store it at temperature above 60°C (140°F);
- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Improper battery use may result in a fire, explosion or other hazard.
- Do not replace an embedded battery pack. Improper replacement may present a risk of fire, explosion, leakage or other hazard. Contact the manufacturer for replacement.
- This device shall only be connected to CTIA Certification certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Device and battery as a unibody device must be disposed of in accordance with locally applicable environmental regulations.

**INSPIRE GREATNESS**