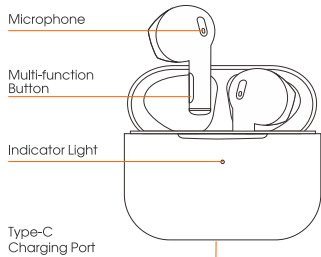
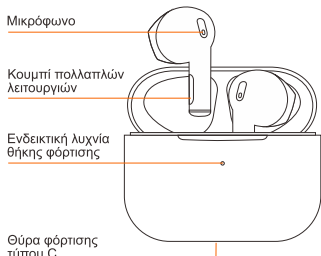


 USER MANUAL  Air Mini Pro(EA208) TWS Earbuds Before using this product, please read these instructions carefully and keep them.	WELCOME Thank you for choosing RIVERSONG Product. Our wireless earphones come with light weight and fashionable design,along with on-the-go controls for your music and calling experience. WIRELESS TECHNOLOGY With the latest BT 5.3 wireless technology, you can enjoy hassle free music without any interruption and you don't have to face wire tapping issues. Wireless connection allows you to enjoy your music experience or calls without holding your mobile phone but the maximum distance between them shall be within 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.	CONNECT YOUR DEVICE • Please keep your earbuds near your phone within 1m. • Open the charging box and the headset will automatically turn on, you can hear "Poweron", in 2 seconds. It is search pairing mode. • Turn on your mobile Bluetooth function, and search Bluetooth name "RS Air Mini Pro", click Bluetooth name "RS Air Mini Pro" to connect. • Upon successful pairing, you'll hear a "connected" sound from the earbuds and the light will turn off. OPERATING GUIDE In below instruction, Touch button refers to the multi-function button (please refer to FUNCTION KEY DESCRIPTION) Open the charging box, the headset will automatically turn on, put it in the charging box and close the charging box cover to shut down. • Power on: Long press on the MFB for 3 Seconds • Power off: Long press on the MFB for 5 seconds • Play/Pause: Short press twice on the MFB Button • Last song: Long press MFB 2 seconds on left earbud • Next song: Long press MFB 2 seconds on right earbud • Answer phone call: Short press twice on the MFB button • End phone call: Short press twice on the MFB button • Reject phone call: Long press on the MFB button for 2 seconds • AI voice assistant: Triple click	FUNCTION KEY DESCRIPTION 1. Multi-function Button 2. Microphone 3. Indicator Light 4. Type-C Charging Port 	CHARGING THE EARPHONES 1. Use the Type-C charging port to charge your Box. 2. It should take 2 hours to get fully charged. 3. It performs best after being fully charged.Please use DC-5V power to charge it. Cautions: Please note that the maximum voltage cannot exceed DC-5V. THE EARPHONES LED INDICATOR GUIDE Low power: a vocal message reminds "Battery low" and the blue light is flashing. Charging: the blue light is on. Fully charged: the light turns off. THE CHARGING BOX DISPLAY GUIDE Low power: green light is flashing Charging: the orange indicator blinks. If the orange indicators are steady on, the battery is fully charged. RECONNECTION 1. The earphones will reconnect with your mobile phone automatically. 2. If it doesn't, please find previous paired Bluetooth name to click, it will be connected.
 www.riversongtech.com RIVERSONG TECHNOLOGY CO., LTD. Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong Official website: www.riversongtech.com	FAQ Why can't I find the earphones model on my phone? It might be because the earphones are power off, or the wireless connection function of your mobile phone encounters some issues. 1. After you power off your earphones, long press on the multi-function button until the red and blue lights flash alternately to activate the earphones' pairing status. 2. Reboot your phone, and connect again. NOTE When the earphones are under pairing status, the wireless connection pairing with your mobile phone should be done within 5 minutes, otherwise your earphones will automatically power off. Why the earphones cannot be linked with my mobile phone using the wireless connection function? It might be because the wireless connection function on your device is not turned on; your earphones are connected to another device; or the earphones are still in pairing mode. 1. Please check if the wireless connection function on your device is turned on. 2. Please check and confirm your earphones are not connected to another device. 3. Please check if your earphones are in pairing mode	Why can't I hear any sound from my earphones? It might be because the earphones' volume is down to minimum; the earphones are not well connected with your phone; or your earphones are not within the wireless connection working range. 1. Adjust volume on your phone. 2. Proceed to connection process again. 3. Keep your earphones within 10 meters from your mobile phone to respect the wireless connection working range. NOTE When your earphones and mobile phone are in pairing connection process, please do not do any other operations with those devices. When charging, why does the orange light not lighting up? It might be because you did not use your earphones for a long time. Charge your earphones for 30 minutes until the orange light is on. NOTE Overcharging or placing the earphones under high temperature atmosphere will cut down the battery capacity and lifetime.	Why the earphones call quality is not good? It might be because the mobile network is not good enough; or the earphones are not in the wireless connection working range. 1. Confirm whether the mobile network is strong enough. 2. Please confirm that the earphones are within the effective working distance of 10 meters from your mobile phone, also check if no major obstacle is causing interference to connection. When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons? It might be because the mobile phone doesn't support the AVRCP (Audio/Video Remote Control Profile) protocol. This feature requires the mobile device to be paired with the earphones to support the AVRCP (Audio/Video Remote Control Profile) protocol.	SPECIFICATION Product name: Air Mini Pro Model: EA208 Bluetooth version: V5.3 Connection distance: 10m Frequency response: 20Hz-20KHz Speaker size: Ø13mm Impedance: 32Ω±15% Input voltage: 5V~300mA Earbuds battery: 30mAh Charging battery: 240mAh Playback time: ~5h(volume at 70%) Charging port: Type-C Net weight: ~36g Gross weight: ~78g
 ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ  Air Mini Pro(EA208) TWS Earbuds Πριν χρησιμοποιήσετε αυτό το προϊόν, διαβάστε προσεκτικά τις οδηγίες και διατηρήστε τις.	ΚΑΛΩΣ ΗΡΘΑΤΕ Σας ευχαριστούμε που επέλεξε ένα από τα προϊόντα της RIVERSONG. Τα ασύρματα μας ακουστικά διαθέτουν ελαφρύ και μοντέρνο σχεδιασμό παράλληλα με πλήρη έλεγχο λειτουργιών για την καθημερινή σας μουσική και ακουστική ποιοτική εμπειρία. ΑΣΥΡΜΑΤΗ ΤΕΧΝΟΛΟΓΙΑ Με την τελευταία ασύρματη τεχνολογία BT 5.3, μπορείτε να απολαύσετε τη μουσική σας και τις κλήσεις σας χωρίς διακοπές. Η ασύρματη σύνδεση σας επιτρέπει να απολαύσετε τη μουσική ή τις κλήσεις σας χωρίς να κρατάτε το κινητό σας με μέγιστη απόσταση μεταξύ τους τα 10 μέτρα (περίπου 30 πόδια). Η ασύρματη σύνδεση ενδέχεται να παρεμποδίζεται από εμπόδια (όπως τοίχοι) ή άλλες ηλεκτρονικές συσκευές.	ΣΥΝΔΕΣΤΕ ΤΗ ΣΥΣΚΕΥΗ ΣΑΣ Παρακαλώ κρατήστε τα ακουστικά σε απόσταση μέχρι και 1 μέτρο από τη συσκευή. • Βυθίστε τα ακουστικά από τη θήκη και θα ακούσετε τις φωτεινικές οδηγίες "Power off" και "Pairing" σε 2 δευτερόλεπτα. Είναι η λειτουργία αναζήτησης-σύνδεσης. • Ενεργοποιήστε τη λειτουργία Bluetooth στη συσκευή σας και αναζητήστε το μοντέλο "RS Air Mini Pro". Επιλέξτε το για σύνδεση. • Με την επιτυχή σύνδεση, θα ακούσετε τη φωνητική . ΟΔΗΓΙΕΣ ΛΕΙΤΟΥΡΓΙΑΣ Στις παρακάτω οδηγίες, το κουμπι αθής αναφέρεται στο ΚΟΥΜΠΙ ΠΟΛΥΛΕΠΛΩΝ ΛΕΙΤΟΥΡΓΙΩΝ (Κ.Π.Λ) Ενεργοποιήστε τα ανοίγοντας τη θήκη φόρτισης και απενεργοποιήστε τα τοποθετώντας τα στη θήκη φόρτισης. • Ενεργοποίηση: Παρεταγμένο πάτημα στο ΚΠΛ για 3 δευτερόλεπτα • Απενεργοποίηση: Παρεταγμένο πάτημα στο ΚΠΛ για 5 δευτερόλεπτα • Αναπαύση/Παύση: Γρήγορο κλικ 2 φορές στο ΚΠΛ • Τελεία τραγούδι: Παρεταγμένο πάτημα 2 δευτερόλεπτα στο ΚΠΛ στο αριστερό κουμπι ΚΠΛ • Επόμενο τραγούδι: Παρεταγμένο πάτημα 2 δευτερόλεπτα στο ΚΠΛ στο δεξιό κουμπι ΚΠΛ • Απάντηση τηλεφωνικής κλήσης: Γρήγορο κλικ 2 φορές στο ΚΠΛ • Τερματισμός τηλεφωνικής κλήσης: Γρήγορο κλικ 2 φορές στο ΚΠΛ • Αποθήκευση τηλεφωνικής κλήσης: Παρεταγμένο πάτημα στο ΚΠΛ για 2 δευτερόλεπτα • AI φωνητικός βοηθός: Τριπλό κλικ	FUNCTION KEY DESCRIPTION 1. Κουμπι πολλαπλών λειτουργιών 2. Μικρόφωνο 3. Ενδεικτική λυχνία θήκης φόρτισης 4. Θύρα φόρτισης τύπου C 	ΦΟΡΤΙΣΗ ΤΩΝ ΑΚΟΥΣΤΙΚΩΝ 1. Χρησιμοποιήστε τη θύρα φόρτισης Type-C για να φορτίσετε τα ακουστικά σας. 2. Θα χρειαστούν 2 ώρες για να φορτιστούν πλήρως. 3. Τα ακουστικά έχουν καλύτερη απόδοση μετά από πλήρη φόρτιση. Χρησιμοποιήστε ρεύμα DC-5V για να τα φορτίσετε. Προσοχή: Λάβετε υπόψη ότι η μέγιστη ισχύ δεν μπορεί να υπερβεί το όριο DC-5V. ΟΔΗΓΟΣ ΕΝΔΕΙΞΗΣ LED ΑΚΟΥΣΤΙΚΩΝ Χαμηλή ισχύς: μια υπενθύμιση φωνητικού μηνύματος "Χαμηλή μπαταρία" και το μπλε φως αναβοβλίνει. Φόρτιση: το μπλε φως είναι αναμμένο. Πλήρης φόρτιση: το φως σβήνει. ΟΔΗΓΟΣ ΤΗΣ ΘΗΚΗΣ ΦΟΡΤΙΣΗΣ Χαμηλή ισχύς: Η πράσινη ένδειξη του κουπού φόρτισης αναβοβλίνει. Φόρτιση: Η ένδειξη αναβοβλίνει. Πλήρης φόρτιση: η πορτοκαλί ενδεικτική λυχνία είναι πάντα αναμμένη ΕΠΑΝΑΣΥΝΔΕΣΗ 1. Τα ακουστικά θα συνδεθούν στη συσκευή αυτόματα. 2. Αν δε συνδεθούν, επιλέξτε τη προηγούμενη συσκευή Bluetooth που είχε συνδεθεί στη συσκευή.

正面

背面