

RIVERSONG

USER GUIDE

POWER BANK

Charging and Discharging Instructions

Discharge Indicators

4 LED Lights ON	76%-100%Power Remaining
3 LED Lights ON	51%-75%Power Remaining
2 LED Lights ON	26%-50%Power Remaining
1 LED Light ON	10%-25% Power Remaining
1 LED Light Blinking	< 10%Power Remaining
1 LED Green Light ON	Wireless Charging is Remaining
1 LED Green Light Blinking	FOD is Remaining

MagSpeed 10(PB102)

Before using this product, please read these instructions carefully and keep them.

Charging and Discharging Instructions

Charge Indicators

1 LED Light Blinking	10%-25% Power Remaining
1 LED Light ON and 1 Blinking	26%-50%Power Remaining
2 LED Lights ON and 1 Blinking	51%-75% Power Remaining
3 LED Lights ON and 1 Blinking	76%-99% Power Remaining
4 LED Lights ON	100% Power Remaining

MagSpeed 10(PB102)

Before using this product, please read these instructions carefully and keep them.

Technical Parameters

Product Name: MagSpeed 10

Model:PB102

Capacity: 10000mAh/3.85V/38.5Wh

USB-C Input:

5V=3A 9V=2A 12V=1.5A 18W (Max)

USB-C Output:

5V=3A 9V=2.22A 12V=1.67A 20W (Max)

USB-A Output:

5V=4.5A 4.5V=5A 9V=2A 12V=1.5A 22.5W (Max)

Wireless Output: 15W(Max)

Product size: ≈110*70*17mm

Weight: ≈185g

Color: White

Power status indications are as follows:


Power Indicator	○○○○	●○○○	●●○○	●●●○	●●●●
Power Left	Low Power	≤ 25%	26-50%	51-75%	76-100%

Parts List

- Power Bank
- USB-A to USB-C Cable

User Manual

Warranty Card



www.riversongtech.com

How to Use

 
- If your device supports MagSafe, align the device's magnet with the power bank's coil and the device can be charged.
- Press the power button to turn on the power bank. The power indicator light will turn off automatically if the power bank is not in use.
- Output and Input ports can be found on the bottom of the power bank. The USB port is compatible for a variety of devices such as smart phones, tablets or other digital devices. It automatically charges the device, every time it connects to a USB port.
- Use the provided Type-C cable in order to connect the power bank to an adapter.
- The power bank will start charging the device as soon as the charging device is plugged into power bank.
- Once the device is fully charged, please unplug the charging cable and disconnect the charging device.
- Do not put any coins or metallic on the wireless charging area of the power bank.

Attention

- Read the user guide carefully in order to prevent hazards and accidents related to improper use.
- Do not throw, knock or drop the product. It will damage the outer case and inner PCBA.
- Please keep away the product from fire or water and avoid exposing to sunlight or rain for a long time.
- Please do not keep the product in high temperature places or near the flammable liquids, gases or explosives.
- Keeping the product in high temperature for long time, will influence the life of the product.
- When not in use, please keep the power bank in dry place.
- Please do not disassemble the product or use the damaged product.
- Operating temperature range: 0 C -40 C .

RIVERSONG TECHNOLOGY CO., LTD.

Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong
 Official website: www.riversongtech.com



Designed By Riversong In California. Made In China

说明书
料号: 07.PB102.00301-11
材质: 80g书页纸
尺寸: 70*50mm