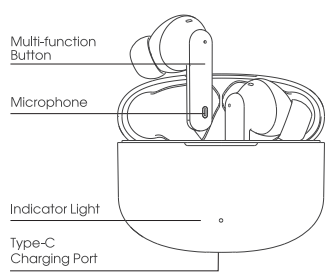
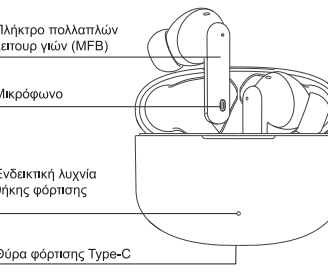


EA226说明书（英语+希腊语+罗马尼亚语），
料号：07.EA226.00301-15
材质：80g书纸 单色双面印刷，不过胶，风琴折，尺寸:54*80mm

RIVERSONG USER MANUAL  Airfly L8 (EA226) TWS Earbuds Before using this product, please read these instructions carefully and keep them.	WELCOME Thank you for choosing us. Our wireless earphones have a fashionable design, powerful functions, high compatibility and a true hands-free convenience when making calls and listening to music! WIRELESS TECHNOLOGY The latest BT 5.3 wireless technology, you can enjoy hassle free music without any interruption and you don't have to face wire tangling issues. Wireless connection allows you to enjoy your music experience or calls without holding your mobile phone but the maximum distance between them shall be within 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.	CONNECT YOUR DEVICE - Please keep your earbuds near your phone within 1m. - Open the charging box and the headset will automatically turn on, so you can hear "Poweron", in 2 seconds. It is search-pairing mode. - Turn on your mobile Bluetooth function, and search Bluetooth name "Airfly L8". click Bluetooth name "Airfly L8" to connect. - Upon successful pairing, you'll hear a "connected" sound from the earbuds and the light will turn off. OPERATING GUIDE In below instruction, Touch button refers to the multi-function button (please refer to FUNCTION KEY DESCRIPTION) Open the charging box, the headset will automatically turn on, put it in the charging box and close the charging box cover to shut down. - Play/Pause: Tap on once on the MFB (L/R) - Last song: Short press twice on left multi-function button - Next song: Short press twice on right multi-function button - Volume up:Short press three times on right multi-function button - Volume down: Short press three times on left multi-function button - Answer phone call: Short press once on the MFB button - End phone call: Short press once on the MFB button - AI voice assistant: Long press on the MFB button for 3 seconds	FUNCTION KEY DESCRIPTION - Multi-Function Button - Microphone - Indicator Light - Type-C Charging Port 	CHARGING THE EARPONES - Use the Type-C charging port to charge your Box. 2It should take 2 hours to get fully charged. - It performs best after being fully charged.Please use DC-5V power to charge it. Cautions: Please note that the maximum voltage cannot exceed DC-5V. THE EARPHONES LED INDICATOR GUIDE Low power: a vocal message reminds "Battery low"and the red light is flashing. Charging: the red light is on. Fully charged: the light turns off. THE CHARGING BOX DISPLAY GUIDE Low powered light is flashing. Charging:The Red indicator blinks. If the red indicators are steady on, the battery is fully charged. RECONNECTION - The earphones will reconnect with your mobile phone automatically. - If it doesn't, please find previous paired Bluetooth name to click, it will be connected.
 www.riversongtech.com RIVERSONG TECHNOLOGY CO., LTD. Address : No. 110B Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong Official website: .www.riversongtech.com	FAQ Why can't I find the earphones model on my phone? It might be because the earphones are power-off; or the wireless connection function of your mobile phone encounters some issue. - Put the earbuds into the charging box again, then open the charging box and take out the earbuds, and search for pairing again. - Restart your phone and connect again. - Touch the multi-function button 6 times to restore to factory settings and search for connection again.Insert the earbuds into the charging case and close it.Then, open the charging case again to enter Bluetooth pairing mode. NOTE When the earphones are under pairing status, the wireless connection pairing with your mobile phone should be done within 5 minutes, otherwise your earphones will automatically power off. Why the earphones cannot be linked with my mobile phone using the wireless connection function? It might be because the wireless connection function on your device is not turned on; your earphones are connected to another device; or the earphones are still in pairing mode. - Please check if the wireless connection function on your device is turned on. - Please check and confirm your earphones are not connected to another device. - Please check if your earphones are in pairing mode (which will be indicated by light in red & blue flashing alternately).	Why can't I hear any sound from my earphones? It might be because the earphones' volume is down to minimum; the earphones are not well connected with your phone; or your earphones are not within the wireless connection working range. - Adjust volume on your phone. - Proceed to connection process again. - Keep your earphones within 10 meters from your mobile phone to respect the wireless connection working range. NOTE When your earphones and mobile phone are in pairing connection process, please do not do any other operations with those devices. When charging, why does the red light not lightning up? It might be because you did not use your earphones for a long time. Charge your earphones for 30 minutes until the red light is on. NOTE Overcharging or placing the earphones under high temperature atmosphere will cut down the battery capacity and lifetime.	Why the earphones call quality is not good? It might be because the mobile network is not good enough; or the earphones are not in the wireless connection working range. - Confirm whether the mobile network is strong enough. - Please confirm that the earphones are within the effective working distance of 10 meters from your mobile phone, also check if no major obstacle is causing interference to connection. When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons? It might be because the mobile phone doesn't support the AVRCP (Audio/Video Remote Control Profile) protocol. This feature requires the mobile device to be paired with the earphones to support the AVRCP (Audio/Video Remote Control Profile) protocol.	SPECIFICATION Product name: Airfly L8 Model: EA226 Bluetooth version: V5.3 Connection distance: 10m Frequency response: 20Hz~20KHz Speaker size:Ø10mm Impedance: 32Ω±5% Earbud battery: 40mAh Charging battery: 300mAh Input voltage: 5V=300mA Input back time: ~6h (volume at 70%) Charging port: Type-C Net weight:40g Gross weight:70g
RIVERSONG ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ  Airfly L8 (EA226) Ακουστικά TWS Πριν από τη χρήση του προϊόντος, παρακαλούμε διαβάστε προσεκτικά τις οδηγίες αυτές και κρατήστε τις για να ανατρέξετε στο μέλλον.	ΚΛΑΟΣ ΗΘΥΑΤΕ Σας ευχαριστούμε που μας επιλέξατε. Τα ασύρματα ακουστικά μας έχουν μοντέρνο σχεδιασμό, μεγάλη ισχύ, υψηλή συμβατότητα και προηγμένη hands-free συσκευή για να απολαμβάνετε τις κλήσεις και τη μουσική σας. ΑΣΥΡΜΑΤΗ ΤΕΧΝΟΛΟΓΙΑ Με την πλέον σύγχρονη ασύρματη τεχνολογία BT 5.3 μπορείτε να απολαύσετε ελεύθερα τη μουσική σας αδιάκοπα και χωρίς να ασχολούμαστε με υπερβολές καλώδια. Η ασύρματη σύνδεση σας επιτρέπει να απολαμβάνετε τη μουσική σας και τις κλήσεις σας χωρίς να κρατάτε το κινητό σας τηλέφωνο, αλλά η μέγιστη απόσταση μεταξύ τους θα πρέπει να είναι 10 μέτρα. Η ασύρματη σύνδεση μπορεί να επηρεαστεί από εμπόδια (π.χ., τοίχοι ή άλλες ηλεκτρονικές συσκευές). ΣΥΝΔΕΞΤΕ ΤΙΣ ΣΥΣΚΕΥΗ ΣΑΣ Κρατήστε τα ακουστικά σας κοντά στο τηλέφωνό σας σε απόσταση έως 1 μέτρο. • Ανοίξτε τη θήκη φόρτισης και τα ακουστικά θα ενεργοποιηθούν αυτόματα, σε 2 δευτ. θα ακουστεί ηχητική υποδείξηση "Power on" και τα ακουστικά μπαίνουν σε λειτουργία σύνδεσης. • Ενεργοποιήστε τη λειτουργία Bluetooth στο κινητό σας, αναζητήστε τη συσκευή "Airfly L8" στις συνδέσεις και κάντε κλικ σε αυτή για σύνδεση. • Μετά από την επιτυχή σύνδεση θα ακούσετε το μήνυμα "συνδεδεμένο" από τα ακουστικά σας και η φωτεινή ένδειξη θα απενεργοποιηθεί.	ΟΔΗΓΙΕΣ ΛΕΙΤΟΥΡΓΙΑΣ Σίς παρακάτω οδηγίες, το πλίκερτο Άφής (Touch button) αναφέρεται στα πλίκερτα πολλαπλών λειτουργιών (multi-function button, MFB) (βλέπε στην Πίνακράση) Στοιχείων Λειτουργίας), • Ανοίξτε τη θήκη φόρτισης, τα ακουστικά θα ενεργοποιηθούν αυτόματα, να να απενεργοποιηθούν βάλτε το στη θέση φόρτισης και κλείστε το καπάκι της θήκης. • Play/Pause (Αναπαύση/Παύση): Αγγίξτε μια φορά το αρκτερότερο πλίκερτο MFB (L/R) • Τελευταίο τραγούδι: Πατήστε σύ ντομα δύο φορές το αρκτερότερο πλίκερτο MFB • Εμπέδωμα τραγουδι: Πατήστε σύ ντομα δύο φορές το δεξιό MFB • Αύξηση έντασης: Πατήστε σύ ντομα τρας φορές το δεξιό MFB • Μείωση έντασης: Πατήστε σύntonμα τρας φορές το αρκτερότερο MFB • Απάντηση φωνητικής κλήσης: Πατήστε σύntonμα μία φορά το πίκι κρας MFB • Τερματισμός φωνητικής κλήσης: Πατήστε σύntonμα μία φορά το τελευταίο βοθίδος AE Πατήστε παραπεταμένο το MFB για 3 δευτ. ΠΕΡΙΓΡΑΦΗ ΣΤΟΙΧΕΙΩΝ ΛΕΙΤΟΥΡΓΙΑΣ 1. Πλίκερτο πολλαπλών λειτουργιών MFB (MFB) 2. Μικρόφωνο 3. Ενδεικτική λυχνία θέσης φόρτισης 4. Θύρα φόρτισης Type-C	Πλίκερτο πολλαπλών λειτουργιών (MFB) Μικρόφωνο Ενδεικτική λυχνία θέσης φόρτισης Θύρα φόρτισης Type-C 	ΦΟΡΤΙΣΗ ΤΩΝ ΑΚΟΥΣΤΙΚΩΝ - Φορτίστε τη θήκη μέσω της θύρας φόρτισης Type-C. - Για την πλήρη φόρτιση θα χρεια στούν 2 ώρες. - Η βλέπιση λειτουργία επηγεύθηκε τα μετά από πλήρη φόρτιση. Χρήσιμ μοπατέρισε τροφοδοσία DC-5V για τη φόρτιση. Προσοχή: Επιμάρτε ότι η μέγιστη τάση δεν μπορεί να ξεπερνά το DC-5V. ΟΔΗΓΟΣ ΕΝΔΕΙΚΤΙΚΗΣ ΑΥΧΗΣ ΑΝΑΒΟΛΗΝ Χαμηλή κός: Η κόκεψη λυχνία αναβοβρίνα, Φόρτιση: Η κόκεψη λυχνία αναβρίνα. ΟΔΗΓΟΣ ΕΝΔΕΙΞΕΩΝ ΘΗΚΗΣ ΦΟΡΤΙΣΗΣ Χαμηλή κός: Η κόκεψη λυχνία αναβοβρίνα, Φόρτιση: Η κόκεψη ενδείξη αναβρίνα. Εάν η κόκεψη ενδείξη είναι συνεχώς αναμμένη, η μπαταρία είναι πλήρως φορτισμένη. ΕΠΑΝΑΣΥΝΔΕΣΗ 1. Τα ακουστικά θα επανασυνδε θούν με το κινητό σας στεκεροπονημένο ή λειτουργία σύμφωνα σύνδεσης το τηλέφωνό σου ανεμμετωπίζω κάποιο πρόβλημα. 2. Εάν δεν συμβεί αυτό, αναζητήστε το όνομα της συσκευής στις συνδέσεις Bluetooth και κάντε κλικ σε αυτό για να γίνει η επανασύνδεση. ΣΥΝΧΕΣ ΕΡΩΤΗΣΕΙΣ Πασι δεν μπορεί να βρω το μοντέλο των ακουστικών στο τηλέφωνό μου; Μπορεί να συμβαίνει επειδή τα ακουστικά είναι απενεργοποιημένα ή η λειτουργία σύμφωνα σύνδεσης το τηλέφωνό σου ανεμμετωπίζω κάποιο πρόβλημα. 1. Βατέ και πόλι τα ακουστικά σε στη θέση φόρτισης. Μετά ανοίξτε τη θήκη φόρτισης, βγάλε το ακου στικό και αναζητήστε τη συσκευή.

正面

[illegible]

背面