



All images are for illustration purposes only and may differ from the actual product by model and region.


List

English _____ 2

العربية _____ 9

About this product

The Xiaomi WiFi Range Extender N300 is designed to extend the range of your home Wi-Fi network.

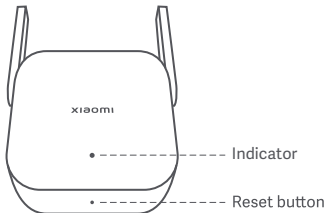

Indicator

Constant blue (working normally)
Flashing blue (update in progress)
Constant yellow (switching on)
Flashing yellow (waiting to initialize)
Flashing red (hardware fault)

Reset button

Press and hold for at least 5 seconds to restore factory settings.

Installation

- 1 Place the range extender in a location where you require a stronger signal. Connect it to the power supply and wait for the yellow indicator to start flashing.



- 2 Scan the QR code to download the Mi Home/Xiaomi Home app and follow the in-app instructions to configure the settings and manage the device.



- 3 The blue indicator will stay constant when the settings have been configured. You can then move the range extender to another location without reconfiguring the settings.

FAQs (frequently asked questions)

How does the Xiaomi WiFi Range Extender N300 extend the range of my Wi-Fi network?

The range extender is designed to strengthen the signal from an existing Wi-Fi network. Before configuring the range extender, determine which network you need to extend and ensure that you know the Wi-Fi password. Range extenders work in a similar way to a relay race – the main router and the range extender are the participants in the race, while the Wi-Fi signal is the baton which is passed between each participant. The connected devices (e.g. your smartphone or computer) are the finish line. The participants pick up the baton and deliver it to the finish line, allowing the Wi-Fi network to cover a larger area. The more range extenders you add to the network, the greater the network range.

How do I configure the settings if I want to connect the range extender to a new Wi-Fi network?

Reset the range extender to factory settings and reconfigure the settings.

English

How do I manage the Xiaomi WiFi Range Extender N300?

If you use the range extender in combination with the Mi Wi-Fi router, you can manage the settings using the Mi Wi-Fi app. If you are using a different router, you can download the Mi Home/Xiaomi Home app to manage the network settings.

What should I do if the Internet speed slows down after I connect the Xiaomi WiFi Range Extender N300?

If the Internet speed slows down after you connect the range extender, there may be interference on the network. Open the Mi Wi-Fi app or Mi Home/Xiaomi Home app and check the range extender status. If the app indicates that the signal is poor, move the range extender closer to the router and try again.

What should I do if the Xiaomi WiFi Range Extender N300 stops working?

Open the Mi Wi-Fi app or Mi Home/Xiaomi Home app and check the range extender status, and then follow the troubleshooting steps below:

English

- 1 If the signal is poor, move the range extender to another location where there are no large obstacles between the range extender and the router.
- 2 If the range extender is offline, check that the router is emitting a Wi-Fi signal. If the router is working normally, restart the range extender and try again.
- 3 Check whether the range extender was blacklisted by your router.
- 4 If the issue persists, hold down the reset button for at least 5 seconds until the indicator is constant yellow. Reconfigure the settings and try again.

Declaration of Conformity:

The product is in compliance with UK PSTI regulations, the full text of declaration of conformity is available at the following internet address: <https://www.mi.com/-global/service/support/declaration.html>

English

Specifications:

Name: Xiaomi WiFi Range Extender N300

Model: RD10M

Operating Temperature: 0~40°C

Input: 100~240 VAC, 50/60 Hz, 0.35 A

Operating Frequency: 2400 MHz~2483.5 MHz(≤ 20 dBm)

Power Consumption: Networked standby mode: ≤ 1.3 W

Time to Enter the Condition: Networked standby mode: ≤ 1 min

Note: The network standby power consumption is 1.3 W, if all wired network ports are connected and all wireless network ports are activated.

Certifications:

Hereby, Beijing Xiaomi Electronics Co., Ltd. declares that the radio equipment type RD10M is in compliance with Directive 2014/53/EU, Directive 2011/65/EU and Directive 2009/125/EC. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.mi.com/global/service/support/declaration.html>

For detailed e-manual, please go to

<https://www.mi.com/global/support/user-guide>

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point



English

for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Caution:

The product can be used within all European Union countries (BE/FR/DE/IT/LU/NL/DK/IE/GB/GR/PT/ES/AT/FI/SE/-CY/CZ/EE/HU/LV/LT/MT/PL/SK/SI/BG/RO/HR).




To comply with CE RF exposure requirements, the device must be installed and operated 20cm (8 inches) or more between the product and all person's body.

The mains plug is used as disconnect device. The pluggable equipment shall be installed near the socket-outlet and shall be easily accessible.

Manufactured by: Beijing Xiaomi Electronics Co., Ltd.
#802, 8th Floor, Building 5, No. 15 10th Kechuang Street,
Beijing Economic-Technological Development Area, Beijing,
China, 100176

نبذة عن المنتج

صُمم موسع نطاق واي فاي N300 من Xiaomi لتمديد نطاق شبكة واي فاي في منزلك.

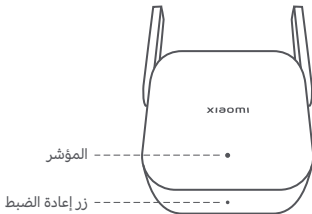

المؤشر

أزرق ثابت (يعمل بشكل طبيعي)
وميض بلون أزرق (التحديث قيد التقدم)
أصفر ثابت (جارٍ بدء التشغيل)
أصفر وامض (بانتظار التهيئة)
أحمر وامض (خطأ في الأجهزة)

زر إعادة الضبط

اضغط مع الاستمرار لمدة 5 ثوانٍ على الأقل
لاستعادة إعدادات المصنع.

التثبيت

- 1 ضع موسع النطاق في مكان تحتاج فيه إلى إشارة أقوى. وصله بمصدر الطاقة وانتظر حتى يبدأ المؤشر باللون الأصفر بالوميض.



- 2 امسح رمز الاستجابة السريعة ضوئياً لتنزيل تطبيق Mi Home/Xiaomi Home واتبع الإرشادات الواردة في التطبيق لتكوين الإعدادات وإدارة الجهاز.



- 3 استظل إضاءة المؤشر الأزرق ثابتة عند الانتهاء من تكوين الإعدادات. يمكنك حينئذٍ تحريك موسع النطاق إلى مكان آخر دون إعادة تكوين الإعدادات.

الأسئلة الشائعة

كيف يوسع موسع نطاق واي فاي N300 من Xiaomi نطاق شبكة واي فاي لدي؟

موسع النطاق مصمم لتقوية الإشارة من شبكة واي فاي حالية. قبل تكوين موسع النطاق، حدد الشبكة المطلوب توسيعها وتأكد من معرفتك لكلمة مرور واي فاي. تعمل موسعات النطاق بطريقة مشابهة لعمل سباق التناوب - حيث يكون الموجه الرئيسي وموسع النطاق هما المشاركان في السباق، بينما إشارة واي فاي هي العصا التي يسلمها كل مشارك إلى الآخر. وتكون الأجهزة المتصلة (مثل الهاتف الذكي أو الحاسوب) هي خط النهاية. يلتقط المتسابقان العصا ويوصلانها إلى خط النهاية، ما يتيح لشبكة واي فاي تغطية مساحة أكبر. كلما زاد عدد موسعات النطاق التي تضيفها إلى الشبكة، زاد نطاق الشبكة.

كيف أدير موسع نطاق واي فاي N300 من Xiaomi؟

إذا استخدمت موسع النطاق إلى جانب موجه Mi Wi-Fi، فيمكنك إدارة الإعدادات باستخدام تطبيق Mi Wi-Fi. إذا كنت تستخدم موجهًا مختلفًا، فيمكنك تنزيل تطبيق Mi Home/Xiaomi Home لإدارة إعدادات الشبكة.

ماذا أفعل إذا أصبحت سرعة الإنترنت بطيئة بعد توصيل موسع نطاق واي فاي N300 من Xiaomi؟

إذا تباطأت سرعة الإنترنت بعد توصيل موسع النطاق، فقد يكون هناك تداخل على الشبكة. افتح تطبيق Mi Wi-Fi أو تطبيق Mi Home/Xiaomi Home وتحقق من حالة موسع النطاق. إذا كان التطبيق يشير إلى أن الإشارة ضعيفة، فقم بوضع الموسع النطاق في الموجه وحاول مرة أخرى.

ماذا أفعل إذا توقف موسع نطاق واي فاي N300 من Xiaomi عن العمل؟

افتح تطبيق Mi Wi-Fi أو تطبيق Mi Home/Xiaomi Home وتحقق من حالة موسع النطاق، ثم اتبع خطوات استكشاف الأخطاء وإصلاحها أدناه:

1 إذا كانت الإشارة ضعيفة، فانقل موسع النطاق إلى مكان آخر لا توجد فيه عوائق كبيرة بين موسع النطاق والموجه.

2 إذا كان موسع النطاق غير متصل بالشبكة، فتتحقق من أن الموجه يُصدر إشارة واي فاي. إذا كان الموجه يعمل بصورة طبيعية، فأعد تشغيل موسع النطاق ثم حاول مرة أخرى.

3 تحقق مما إذا كان موسع النطاق ضمن القائمة السوداء في الموجه أم لا.

4 إذا استمرت المشكلة، فاضغط مع الاستمرار على زر إعادة الضبط لمدة 5 ثوانٍ على الأقل حتى تتحول إضاءة المؤشر إلى اللون الأصفر الثابت. أعد تكوين الإعدادات وحاول مرة أخرى.

كيف أكوّن الإعدادات إذا أردت توصيل موسع النطاق بشبكة واي فاي جديدة؟
أعد ضبط موسع النطاق إلى إعدادات المصنع ثم أعد تكوين الإعدادات.

العربية

المواصفات:

الاسم: موسع نطاق واي فاي N300 من Xiaomi

الطراز: RD10M

درجة حرارة التشغيل: 0 إلى 40 درجة مئوية

الإدخال: 100 إلى 240 فولت تيار متردد، 50/60 هرتز، 0.35 أمبير

تردد التشغيل: 2400 ميجاهرتز~2483.5 ميجاهرتز (≥20 ديسيبيل ميلي واط)

ملاحظة: معدل استهلاك الطاقة في وضع استعداد الشبكة هو 1.3 واط، في حال

توصيل كل منافذ الشبكة السلكية وتنشيط كل منافذ الشبكة اللاسلكية.

الشهادات:



بموجب هذا، تعلن شركة Beijing Xiaomi Electronics Co., Ltd.

أن نوع جهاز الراديو RD10M يتوافق مع التوجيه 2014/53/EU

والتوجيه 2011/65/EU والتوجيه 2009/125/EC. النص الكامل

إعلان مطابقة الاتحاد الأوروبي متاح على عنوان الإنترنت التالي:

<http://www.mi.com/global/service/support/declaration.html>



جميع المنتجات التي تحمل هذا الرمز هي نفايات المعدات

الكهربائية والإلكترونية (WEEE) وفقًا للتوجيه 2012/19/EU

التي لا ينبغي أن تختلط بالنفايات المنزلية التي لم يتم فرزها.

وبدلاً من ذلك، يجب حماية صحة الإنسان والبيئة بتسليم معدات النفايات إلى

نقطة تجميع مخصصة معينة من قبل الحكومة أو السلطات المحلية لإعادة

تدوير نفايات المعدات الكهربائية والإلكترونية. سيساعد التخلص الصحيح

العربية

وإعادة التدوير على منع النتائج السلبية المحتملة على البيئة وصحة الإنسان. يرجى الاتصال بشركة التركيب أو السلطات المحلية للحصول على مزيد من المعلومات حول الموقع بالإضافة إلى شروط وأحكام نقاط التجميع هذه.



هذه المعدات من الفئة الثانية أو معدات كهربائية معزولة عزلاً مزدوجاً. وهو مصمم على نحو لا يتطلب اتصالاً آمناً بالطرف الكهربائي الأرضي.

تنبيه:



يمكن استخدام المنتج في كل بلدان الاتحاد الأوروبي (BE/FR/DE /IT/LU/NL/DK/IE/GB/GR/PT/ES/AT/FI/SE/CY/CZ .(EE/HU/LV/LT/MT/PL/SK/SI/BG/RO/HR

امثالاً لاشتراطات الاتحاد الأوروبي بشأن التعرض لترددات اللاسلكي، يجب تركيب الجهاز وتشغيله على مسافة 20 سم (8 بوصة) أو أكثر من كل جسم الشخص.

يستخدم القابس الرئيسي كجهاز فصل. يجب تركيب الجهاز القابل للتوصيل بالقرب من مخرج المقبس، بحيث يمكن الوصول إليه بسهولة.

الجهة المصنعة: Beijing Xiaomi Electronics Co., Ltd.
#802, 8th Floor, Building 5, No. 15 10th Kechuang Street,
Beijing Economic-Technological Development Area, Beijing,
China, 100176

EU REP.

Xiaomi Technology Netherlands B.V.
Prinses Beatrixlaan 582, 2595BM, The Hague, The
Netherlands

contact@support.mi.com

UK REP.

Xiaomi Technology UK Limited
Davidson House, Forbury Square, Reading, Berkshire RG1

3EU

contact@support.mi.com



XXxx



小米生态链产品包装图纸

图纸提供单位

小米生态链

项目名称

MD10说明书

版本号

V3

设计时间

2024-04-11

设计师

材质工艺要求

材质要求：80g 品旺双胶纸
胶装

制作工序：印刷+模切+胶装

工艺要求：色相正确、印迹牢固、
套印准确、各色套印
不露杂色，套印误差≤ 0.1mm
模切走位≤ ± 0.5mm
(示例，具体以产品要求为准)

颜色及 专色：K+1专

纹理要求

比例 1:1 单位 mm

