EA271说明书（英语+希腊语+罗马尼亚语）
料号：07.EA271.00501-12
材质：80g书纸 单黑印刷，风琴折，尺寸：54*80mm

RIVERSONG

USER MANUAL

Utopia H5（EA271）

TWS Earbuds

Before using this product, please read these instructions carefully and keep them.

WELCOME

Thank you for choosing us. Our wireless earphones have a fashionable design, powerful functions, high compatibility, and a true hands-free convenience when making calls and listening to music!

WIRELESS TECHNOLOGY

With the latest BT 5.3 wireless technology, you can enjoy hassle free music without any interruption and you don't have to face wire tangling issues.

Wireless connection allows you to enjoy your music experience or calls without holding your mobile phone but the maximum distance between them shall be within 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.

CONNECT YOUR DEVICE

- Please keep your earbuds near your phone within 1m.
- Open the charging box and the headset will automatically turn on, you can hear "Power on", in 2 seconds, It is search-pairing mode.
- Turn on your mobile Bluetooth function, and search Bluetooth name " Utopia H5 ", click Bluetooth name " Utopia H5 " to connect.
- Upon successful pairing, you'll hear a "connected" sound from the earbuds and the light will turn off.

OPERATING GUIDE

In below introduction, Touch button refers to the multifunction button (please refer to FUNCTION KEY DESCRIPTION)

Open the charging box, the headset will automatically turn on, put it in the charging box and close the charging box cover to shut down.

- Play/Pause: Tap on once on the multifunction button (L/R)
- Last song: Short press twice on left multifunction button
- Next song: Short press twice on right multifunction button
- AI voice assitant: Short press three times on the multifunction button
- Answer phone call: Short press once on the multifunction button
- End phone call: Short press once on the multifunction button
- Reject a call: Long press the multi-function button (L/R) for 2 seconds

- Long press the L/R multifunction button for 3 seconds to switch freely between transparent mode and ANC ON/OFF mode.

FUNCTION KEY DESCRIPTION

1.Indicator Light
2.Multifunction button
3.Microphone
4.Charging box indicator light
5.Type-C Charging Port

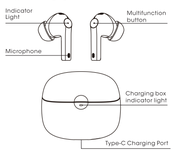

CHARGING THE EARPHONES

1.Use the Type-C charging port to charge your Box.
2.It should take 2 hours to get fully charged.
2. It performs best after being fully charged.Please use DC-5V power to charge it.
Cautions: Please note that the maximum voltage cannot exceed DC-5V.

THE EARPHONES LED INDICATOR GUIDE

Low power: a vocal message reminds "Battery low" and the red light is flashing.
Charging: the red light is on.
Fully charged: the light turns off.

THE CHARGING BOX DISPLAY GUIDE

Low power red light is flashing.
Charging:The Red indicator blinks,
If the red indicators are steady on, the battery is fully charged.

RECONNECTION

1. The earphones will reconnect with your mobile phone automatically.
2. If it doesnt, please find previous paired Bluetooth name to click, it will be connected.

www.riversongtech.com

RIVERSONG TECHNOLOGY CO., LTD.

Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong
Official website: www.riversongtech.com

FAQ

Why can't I find the earphones model on my phone?
It might be because the earphones are power off; or the wireless connection function of your mobile phone encounters some issues
1. Put the earbuds into the charging box again, then open the charging box and take out the earbuds, and search for pairing again.
2. Restart your phone and connect again.
3.Touch the multi-function button 6 times to restore to factory settings and search for connection again.Insert the earbuds into the charging case and close it.Then, open the charging case again to enter Bluetooth pairing mode.

NOTE
When the earphones are under pairing status, the wireless connection pairing with your mobile phone should be done within 5 minutes, otherwise your earphones will automatically power off.

Why the earphones cannot be linked with my mobile phone using the wireless connection function?
It might be because the wireless connection function on your device is not turned on; your earphones are connected to another device; or the earphones are still in pairing mode.
1. Please check if the wireless connection function on your device is turned on.
2. Please check and confirm your earphones are not connected to another device.
3. Please check if your earphones are in pairing mode

Why can't I hear any sound from my earphones?
It might be because the earphones' volume is down to minimum; the earphones are not well connected with your phone; or your earphones are not within the wireless connection working range.
1. Adjust volume on your phone.
2. Proceed to connection process again.
3. Keep your earphones within 10 meters from your mobile phone to respect the wireless connection working range.

NOTE
When your earphones and mobile phone are in pairing connection process, please do not do any other operations with those devices.

When charging, why does the red light not lightning up?
It might be because you did not use your earphones for a long time.
Charge your earphones for 30 minutes until the red light is on.

NOTE
Overcharging or placing the earphones under high temperature atmosphere will cut down the battery capacity and lifetime.

Why the earphones call quality is not good?
It might be because the mobile network is not good enough ; or the earphones are not in the wireless connection working range.

1. Confirm whether the mobile network in strong enough.
2. Please confirm that the earphones are within the effective working distance of 10 meters from your mobile phone. also check if no major obstacle is causing interference to connection.

When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons?
It might be because the mobile phone doesn't support the AVRCP (Audio/Video Remote Control Profile) protocol.

This feature requires the mobile device to be paired with the earphones to support the AVRCP (Audio/Video Remote Control Profile) protocol.

SPECIFICATION

Product name: Utopia H5
Model: EA271
Bluetooth version: V5.3
Connection distance: 10m
Frequency response: 20Hz-20KHz
Speaker size: Ø10mm
Impedance range: 32Ω±5%
Earbud battery: 40mAh
Charging battery: 400mAh
Input voltage: 5V⎓400mA
Playback time: ~6H (volume at 70%)
Charging port: Type-C

RIVERSONG

ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ

Utopia H5（EA271）

Ακουστικά TWS

Πριν από τη χρήση του προϊόντος, παρακαλούμε διαβάστε προσεκτικά τις οδηγίες αυτές και κρατήστε τις για να ανατρέξετε στο μέλλον.

ΚΑΛΩΣ ΗΡΘΑΤΕ

Σας ευχαριστούμε που μας επιλέξατε. Τα ασύρματα ακουστικά μας έχουν μοντέρνο σχεδιασμό, μεγάλη ισχύ, υψηλή συμβατότητα και πραγματική hands-free ευκολία για να απολαμβάνετε τις κλήσεις και τη μουσική σας!

ΑΣΥΡΜΑΤΗ ΤΕΧΝΟΛΟΓΙΑ

Με την πλέον σύγχρονη ασύρματη τεχνολογία BT 5.3 μπορείτε να απολαύσετε ελεύθερα τη μουσική σας αδιάσπαστα και χωρίς να ασχολείστε με μπερδεμένα καλώδια.

Η ασύρματη σύνδεση σας επιτρέπει να απολαμβάνετε τη μουσική σας και τις κλήσεις σας χωρίς να κρατάτε το κινητό σας τηλέφωνο, αλλά η μέγιστη απόσταση μεταξύ τους θα πρέπει να είναι 10 μέτρα. Η ασύρματη σύνδεση μπορεί να επηρεαστεί από εμπόδια (π.χ. τοίχοι) ή άλλες ηλεκτρονικές συσκευές.

ΣΥΝΔΕΣΤΕ ΤΗ ΣΥΣΚΕΥΗ ΣΑΣ

- Κρατήστε τα ακουστικά σας κοντά στο τηλέφωνό σας σε απόσταση έως 1 μέτρο.
- Ανοίξτε τη θήκη φόρτισης και τα ακουστικά θα ενεργοποιηθούν αυτόματα, σε 2 δευτ. θα ακούσετε ηχητική ειδοποίηση "Power on" και τα ακουστικά μπαίνουν σε λειτουργία αζήτητης.
- Ενεργοποιήστε τη λειτουργία Bluetooth στο κινητό σας, αναζητήστε τη συσκευή "Utopia H5 στις συνδέσεις και κάντε κλικ σε αυτή για σύνδεση.
- Μετά από την επιτυχή σύζευξη θα ακούσετε το μήνυμα "συνδέθηκε" από τα ακουστικά σας και η φωτεινή ένδειξη θα απενεργοποιηθεί.

ΟΔΗΓΙΕΣ ΛΕΙΤΟΥΡΓΙΑΣ

Στις παρακάτω οδηγίες, το πλήκτρο Αφής (Touch button) αναφέρεται στο πλήκτρο πολλαπλών λειτουργιών (multi-function-button, MFB) (δείτε στην Περιγραφή Στοιχείων Λειτουργίας).

Ανοίξτε τη θήκη φόρτισης, τα ακουστικά θα ενεργοποιηθούν αυτόματα, για να απενεργοποιο ηθούν βάλτε τα στη θήκη φόρτισης και κλείστε το καπάκι της θήκης.

- Play/Pause (Αναπαραγωγή/ Παύση): Αγγίξτε μία φορά το πλήκτρο MFB (L/R)
- Τελευταίο τραγούδι: Πατήστε σύντομα δύο φορές το αριστερό πλήκτρο MFB
- Επόμενο τραγούδι: Πατήστε σύντομα δύο φορές στο δεξιό πλήκτρο MFB
- Φωνητικός βοηθός AI: Πατήστε σύντομα τρεις φορές στο πλήκτρο MFB
- Απάντηση φωνητικής κλήσης: Πατήστε σύντομα μία φορά στο πλήκτρο MFB
- Τερματισμός φωνητικής κλήσης: Πατήστε σύντομα μία φορά στο πλήκτρο MFB
- Απόρριψη κλήσης: Πατήστε παρατεταμένα το πλήκτρο MFB αριστερά/δεξιά (L/R) για 2 δευτ.
- Πατήστε παρατεταμένα στο πλήκ κτρο MFB αριστερά/δεξιά (L/R) για 3 δευτ. για εναλλαγή λειτουργίας μεταξύ διαυγούς ήχου και ANC ON/OFF.

ΠΕΡΙΓΡΑΦΗ ΣΤΟΙΧΕΙΩΝ ΛΕΙΤΟΥΡΓΙΑΣ

1. Ενδεικτική λυχνία
2. Πλήκτρο πολλαπλών λειτουρ γιών (MFB)
3. Μικρόφωνο
4. Ενδεικτική λυχνία θήκης φόρτισης
5. Θύρα φόρτισης Type-C

ΦΟΡΤΙΣΗ ΤΩΝ ΑΚΟΥΣΤΙΚΩΝ

1. Φορτίστε τη θήκη σας μέσω της θύρας φόρτισης Type-C.
2. Για την πλήρη φόρτισή θα χρειαστούν 2 ώρες.
3. Η βέλτιστη λειτουργία επιτυγχάνεται μετά από πλήρη φόρτιση. Χρησιμοποιήστε τροφοδοσία DC-5V για τη φόρτιση.

Προσοχή: Σημειώστε ότι η μέγιστη τάση δεν μπορεί να ξεπερνά τα DC-5V.

ΟΔΗΓΟΣ ΕΝΔΕΙΚΤΙΚΗΣ ΛΥΧΝΙΑΣ ΑΚΟΥΣΤΙΚΩΝ

Χαμηλή ισχύς: ακούγεται μία ηχητική υπενθύμιση "Battery low" και η κόκκινη λυχνία αναβοσβήνει.
Φόρτιση: η κόκκινη λυχνία ανάβει.
Πλήρης φόρτιση: η λυχνία σβήνει.

ΟΔΗΓΟΣ ΕΝΔΕΙΞΕΩΝ ΘΗΚΗΣ ΦΟΡΤΙΣΗΣ

Χαμηλή ισχύς: η κόκκινη λυχνία αναβοσβήνει.
Φόρτιση: Η κόκκινη ένδειξη αναβοσβήνει.
Εάν η κόκκινη ένδειξη είναι σταθερά αναμμένη, η μπαταρία είναι φορτισμένη πλήρως.

ΕΠΑΝΑΣΥΝΔΕΣΗ

1.Τα ακουστικά θα επανασυνδεθούν με το κινητό σας τηλέφωνο αυτόματα.
2. Εάν δεν συμβεί αυτό, αναζητή στε το όνομα της συσκευής στις συνδέσεις Bluetooth και κάντε κλικ σε αυτό για να γίνει η επανασύν δεση.

www.riversongtech.com

RIVERSONG TECHNOLOGY CO., LTD.

Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong
Official website: www.riversongtech.com

FAQ

De ce nu pot găsi modelul de căşti pe telefonul meu?
S-ar putea să fie din cauza faptului că, căştile sunt oprite sau că funcţia de conexiune fără fir a telefonului mobil întâmpină unele probleme.
1.Puneţi din nou căştile în cutia de încărcare, apoi deschideţi cutia de încărcare şi scoateţi căştile, iar după aceea căutaţi din noua asocierea.
2.Reporniţi telefonul şi conectaţi-vă din nou.
3.Atingeţi butonul multifuncţional de 6 ori pentru a readuce căştile în carcasa de încărcare şi închideţi-o. Apoi, efectuaţi setările din fabrică şi căutaţi din nou conexiunea. Introduceţi din nou carcasa de încărcare pentru a intra în modul de Imperechere Bluetooth.

NOTĂ
Când căştile se află în starea de Imperechere, Imperecherea conexiunii wireless cu telefonul mobil trebuie realizată în termen de 5 minute, altfel căştile se vor opri automat.

De ce nu pot fi conectate căştile cu telefonul meu mobil prin intermediul funcţiei de conexiune wireless?
Este posibil ca funcţia de conexiune wireless de pe dispozitiv să nu fie activată; căştile să fie conectate la un alt dispozitiv; sau căştile să fie încă în modul de asociere.

Mnoţei va oferă/ezta ori în ori în asiprăţeţ ştiţeţ ştiţeţ şti